

Instruction manual

SmartDate X45



Printer Overview



User Interface



Start/Stop the Printer



Select a Job



Menu Tree



Clean the Printhead



Change the Ribbon



Information




Printer overview

■ System Components




- | | |
|---|-----------------------------|
| 1 | Controller User Interface |
| 2 | Printer and Ribbon Cassette |
| 3 | Interconnecting Cable |

■ Printer Type

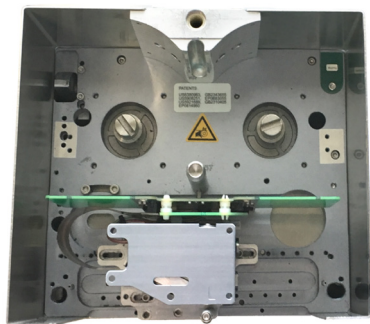


SmartDate X45 Continuous

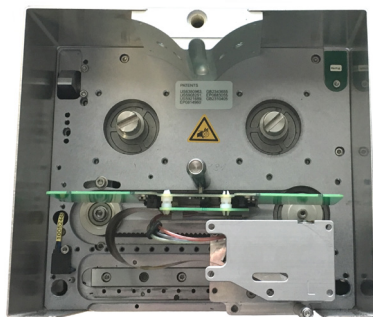


SmartDate X45 Intermittent



Printer Overview

■ Connecting the Power

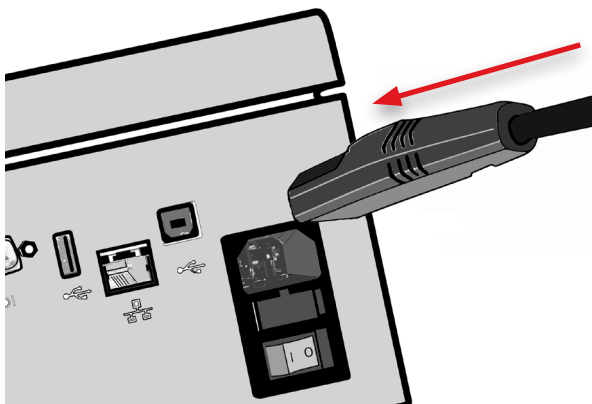


■ Power On/Off

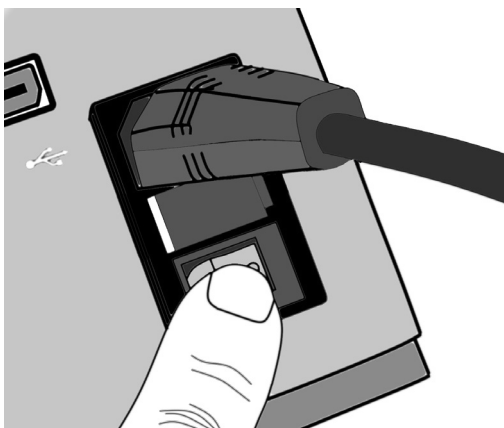


 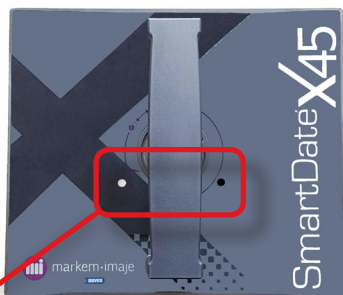


Producing

 

Not Producing

 


Fault

 


Busy

User Interface

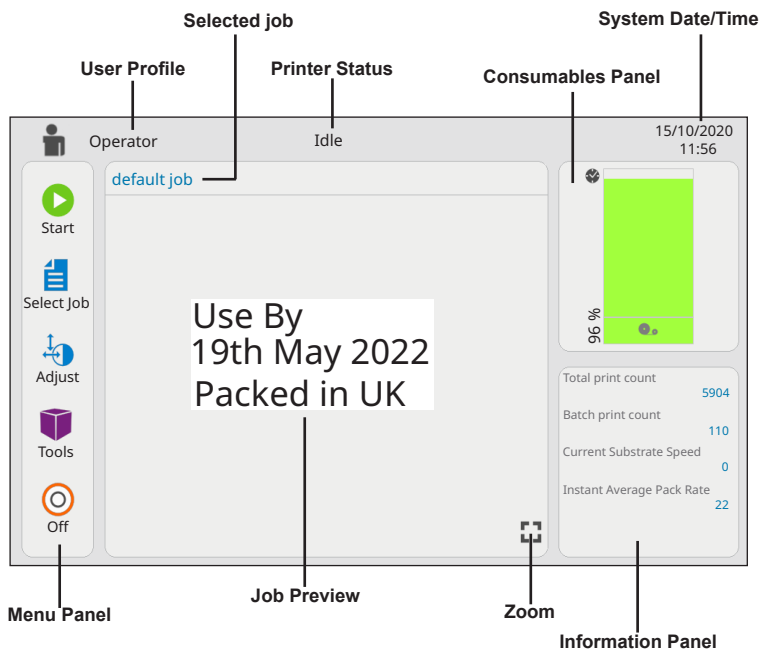


Start/Stop the Printer

■ Starting the Printer

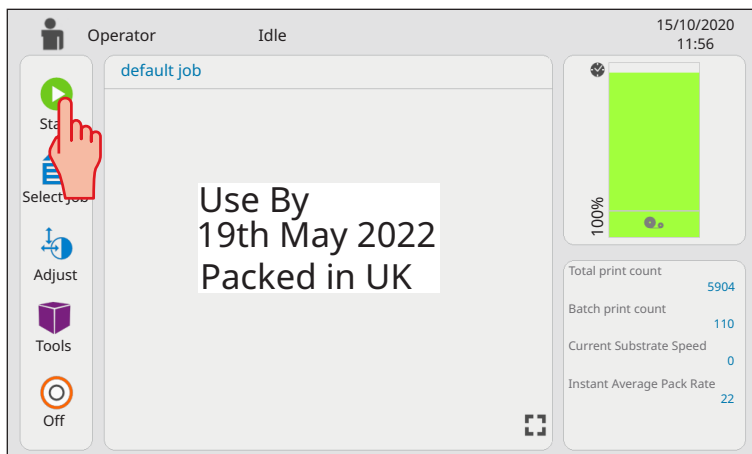


■ Stopping the Printer

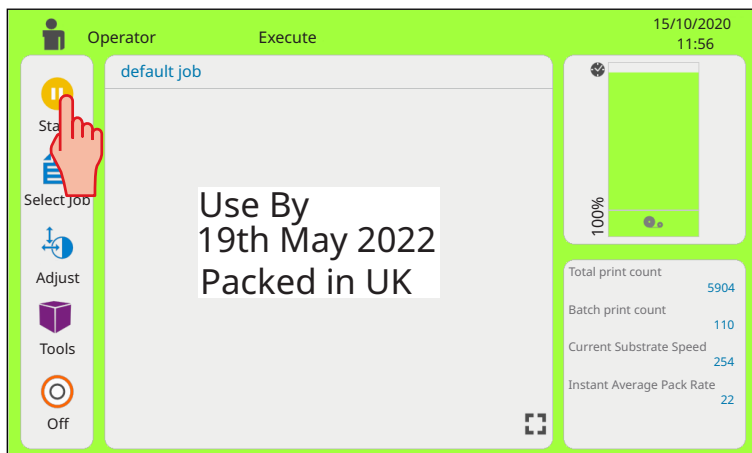


Select a Job

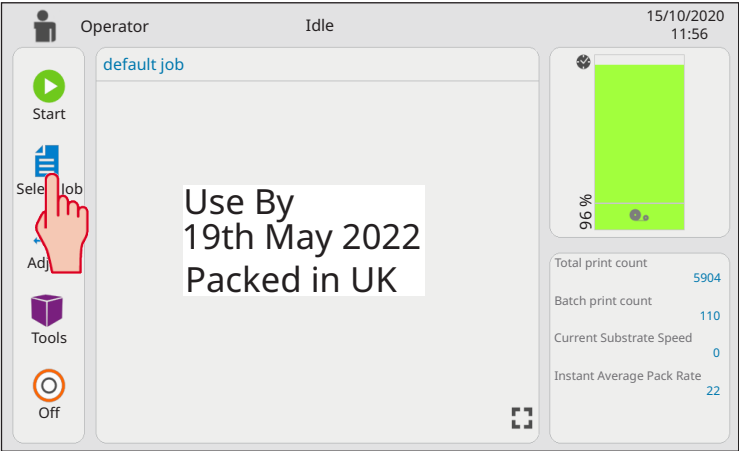

1

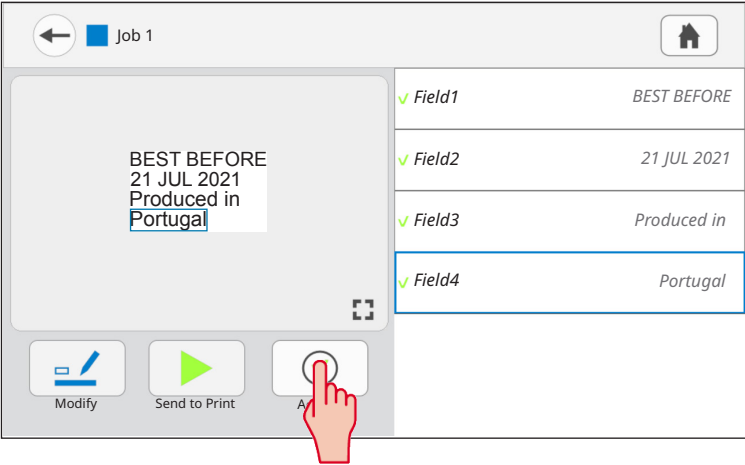


2






3

 Job 1 


BEST BEFORE
21 JUL 2021
Produced in
Portugal




 Modify  Send to  Accept

✓ Field1	BEST BEFORE
✓ Field2	21 JUL 2021
✓ Field3	Produced in
✓ Field4	Portugal

4


 Information

Job selection in progress...





Menu Tree

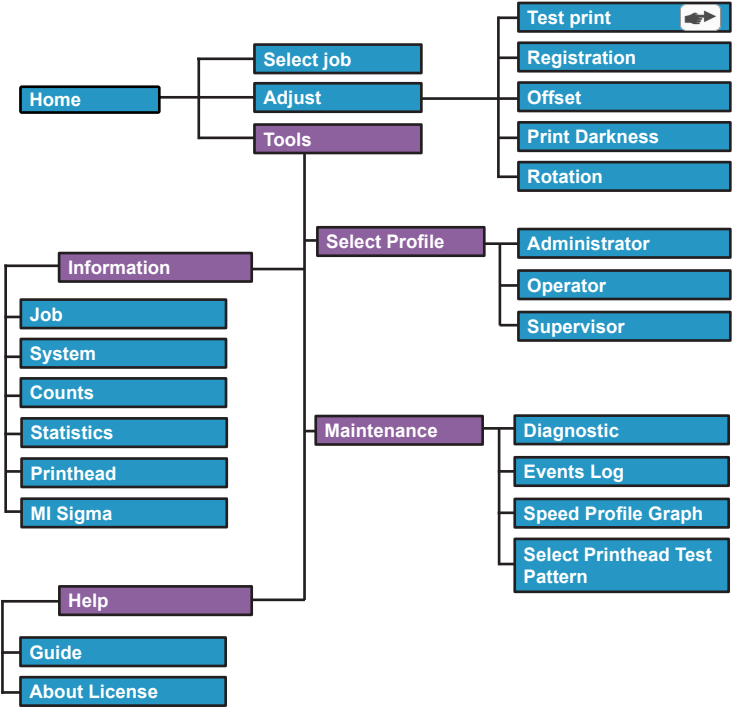

www.markem-imaje.com






Clean the Printhead

Clean the printhead regularly using Markem-Imaje printhead wipes.



1

Remove the cassette and allow the printhead to cool

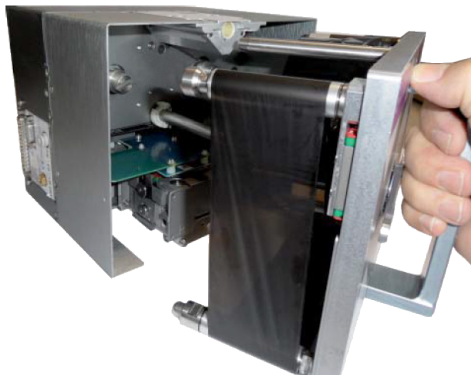

2

Use a Markem-Imaje printhead cleaning wipe to remove any residue from the printhead

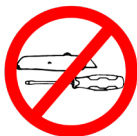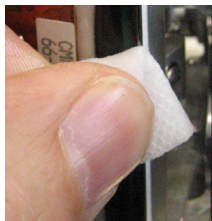


Do not use abrasive materials or tools such as screwdrivers or knives to clean the printhead.



Changing the ribbon

1

Remove the cassette

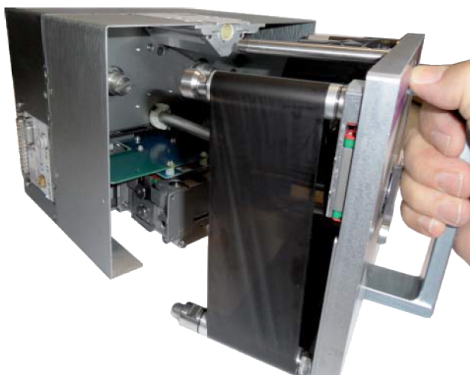

2


Remove the used ribbon and waste cores




Changing the ribbon

3


Load the new ribbon following the ribbon load diagram on the cassette

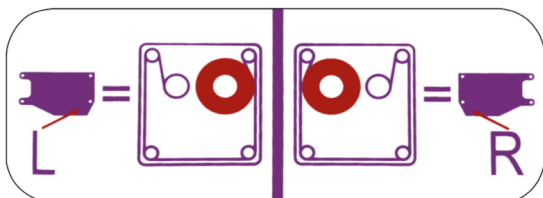


i

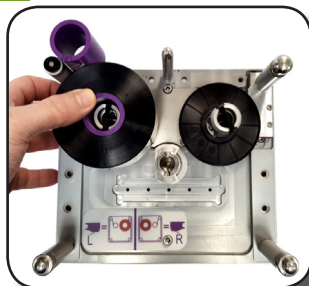


ii

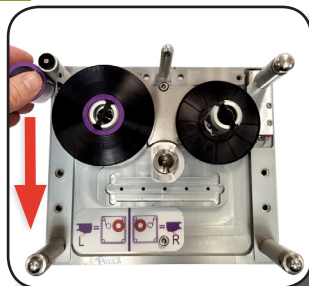

iii

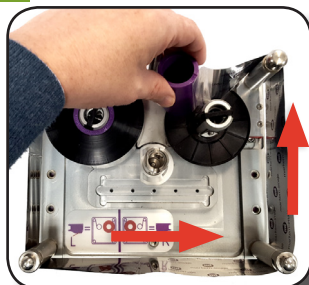


iv

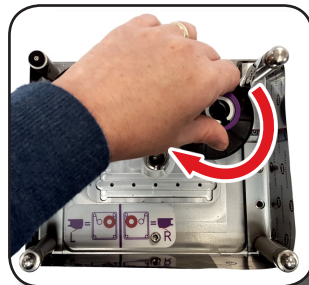

Information

■ Faults

A fault will stop the printer. The fault causing the condition must be fixed before printing can continue.

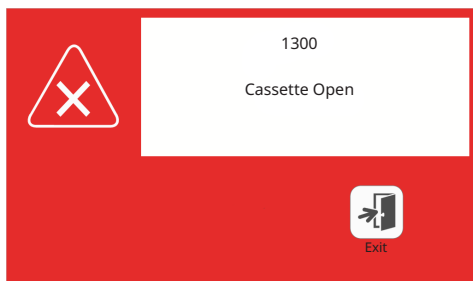

■ Warnings

A warning will not stop the printer, but will highlight information or a condition that may require attention.



■ Common Faults and Warnings

LOW RIBBON

The ribbon will soon run out; prepare a new ribbon.

CASSETTE OPEN

The cassette latch is open; close it.

CALIBRATION FAILED

The ribbon has broken during calibration; reload the ribbon and try again.

RIBBON BREAK DETECTED

The ribbon has broken during printing; reload the ribbon and try again.



www.markem-imaje.com





S/N: Serial number: _____

Ribbon type: _____



For Marking & Coding Equipment. Photographs and drawings are not binding in detail. This document was originally written in English. The English text of this document shall alone be authentic and shall prevail in the event of a dispute. Markem-Imaje reserves the right to modify the specifications of its products without prior notice. Any reproduction, even partial, of this document is prohibited. Original Manual.

© 2019 Markem-Imaje All Rights Reserved. English version







markem·image

a **DOVER** company

Redefine the possiblesm

TSS - User Documentation

Markem-Image Limited
Nottingham Science Park
University Boulevard
Nottingham NG7 2QN
UK

www.markem-image.com

10099182-AB 08/2019

en